


WaterBlock®

Recessed Window Detail


1. Install Sill Face.

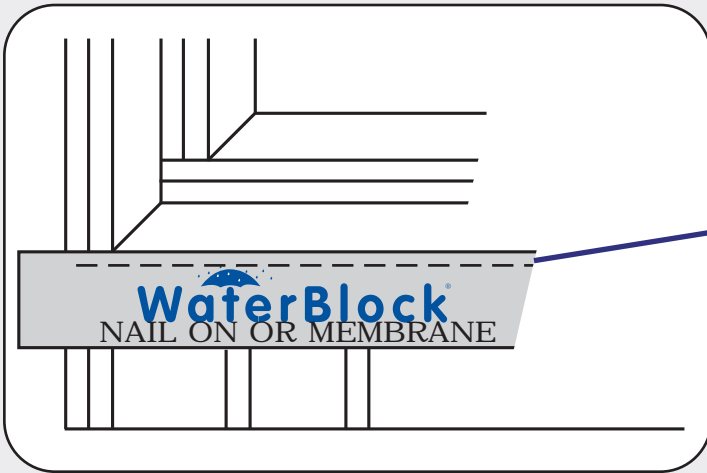


1. Install sill face flashing. Staple or nail top edge.

2. Install Cornerguard.

2. Install Cornerguard. Cut to length. Staple or nail into jambs to hold in place.

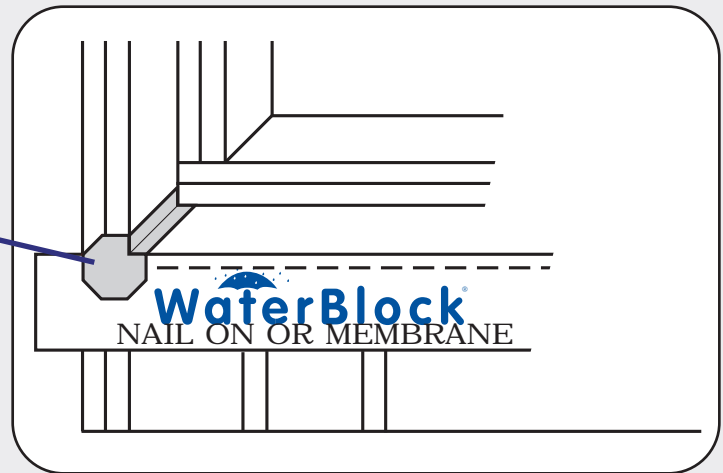

3. Pre-Slit Membrane.

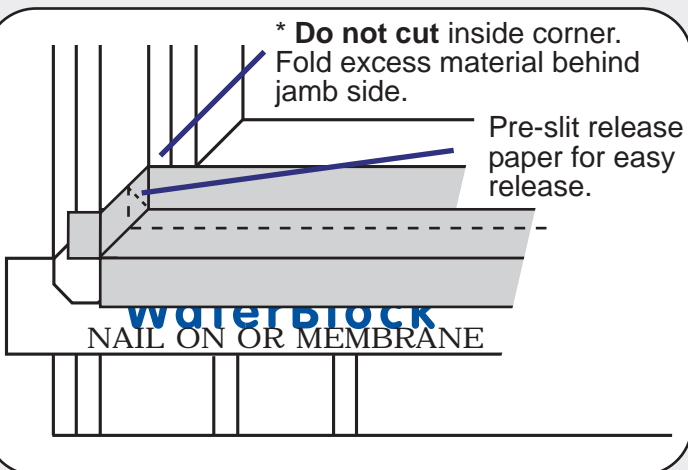

3. Pre-split membrane release paper for easy release. Press membrane into sill, jamb and inside corner. Fold excess material from inside corner toward jamb side. Staple into place on bucks and jambs. Peel at pre-slit and adhere to jamb, sill and sill face. Roll with J-Roller

*See fold detail on Page 2.

WaterBlock®

Inside Corner fold detail for Pot Shelves and Recessed Windows.

(Window)
Top

