


WaterBlock[®]

Recessed Window Detail

1. Install Sill Face.

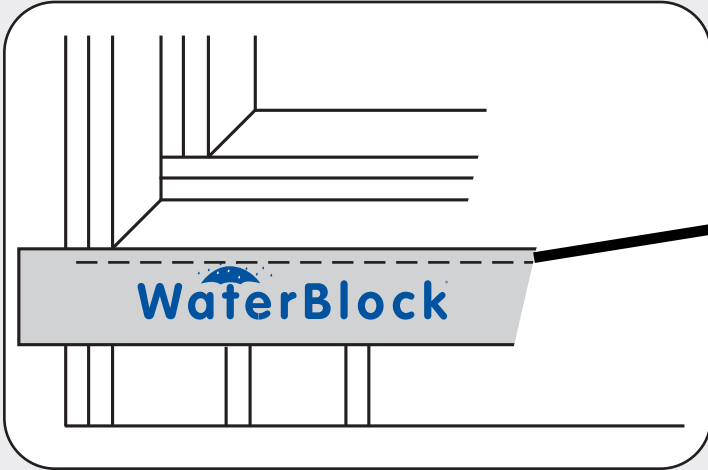


1. **Install sill face flashing.**
Staple or nail top edge.


Use one of the following products for this step; (9" minimum)
25 or 40 mil waterproof flashing membrane or Nail on Flashing

2. Install Cornerguard.

2. **Cut cornerguard to desired length,**
attach with staples or nails into jamb framing

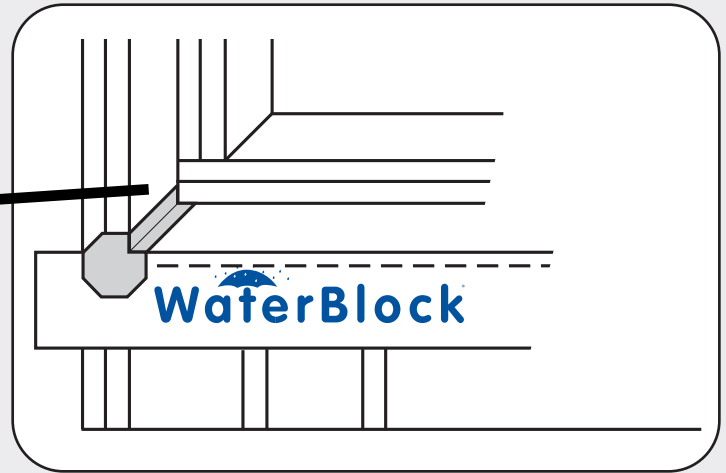

3. Pre-Slit Membrane.

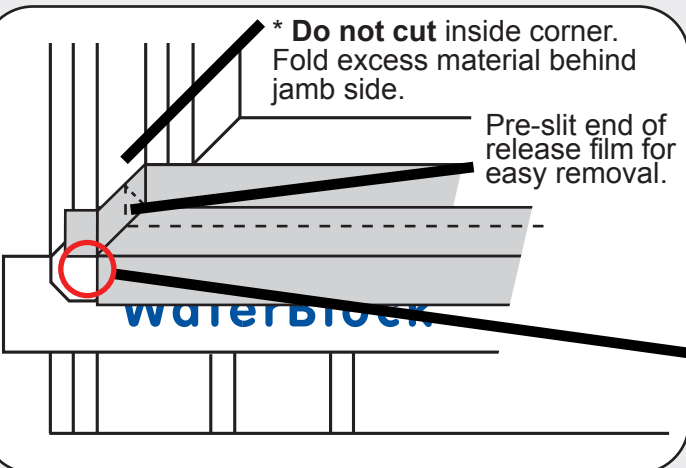


3. **Pre-split approximately 1" of the 40 mil waterproof flashing membranes release film for easy removal. Press membrane into sill, jamb and inside corner. Fold excess material from inside corner toward jamb side. Staple into place on bucks and jambs. Peel at pre-slit and adhere to jamb, sill and sill face. Roll with J-Roller.**

*See fold detail on Page 2.

Install small dab of Waterblock Premium Polyurethane sealant at corner guard membrane intersection to seal off any pin holes that might exist.

Inside corner fold detail for exterior pot shelves and recessed windows.

(Window)
Top

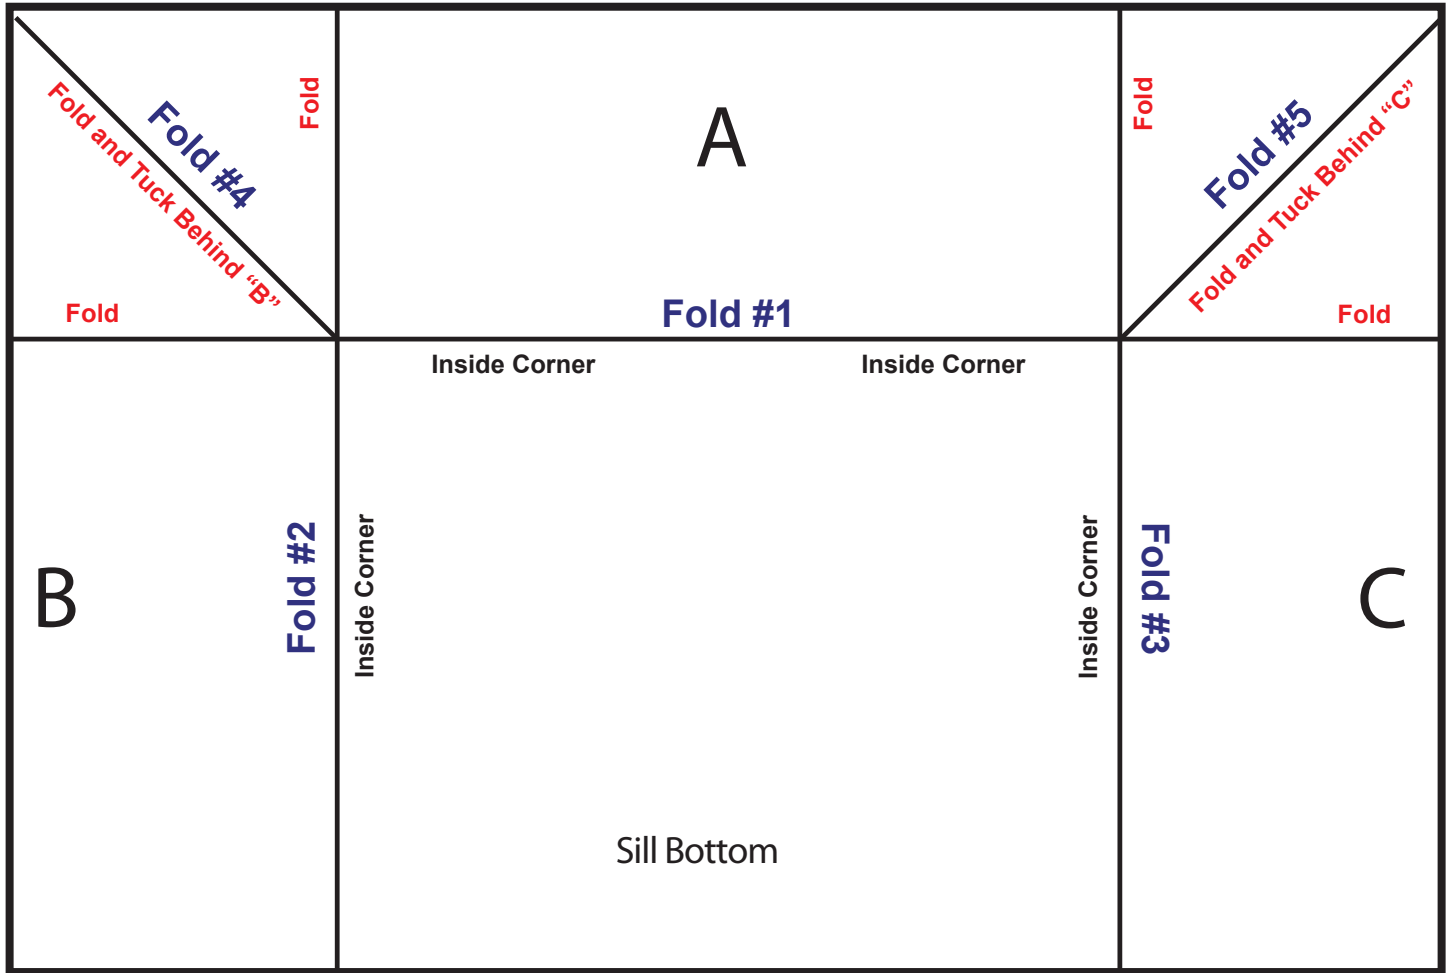

Note: Always use 40 mil WaterBlock waterproof flashing membrane on exterior horizontal areas.